

Connect a Computer Diagram

1. Only one computer can be connected at any one time.
2. The RF Modulator can be purchased thru your local computer dealer.
3. The RF Modulator output should be on the channel not used by your Channel One System (CH1-3; RF MOD-4).

